



WSPRlite Firmware Updates

Firmware is the code (software) that is inside your WSPRlite. Occasionally we may release new versions of the firmware to fix bugs or add new features. When you use the WSPRlite configuration app it shows you the firmware version that is inside your WSPRlite.

To check if your firmware is up-to-date look for information towards the bottom of the page at:

<http://dxplorer.net/wsprlite/>

“Firmware updates”

Not all firmware updates are user-updates as occasionally we release new firmware to support factory testing. If the update is a user-update there will be a link to allow you to download the update.

Using the link, download the HEX file.

Connect your WSPRlite to your computer. Open the config app and connect it to your WSPRlite in the usual way. Click the “Update Firmware” button, select the file and click the OK button and wait while the firmware is updated (normally takes 10-15 seconds).

Once the update is complete, use your WSPRlite as normal.

